




Freightliner Classic FL Fender Shields


Part number 878S

ROADMASTER your source for quality truck accessories

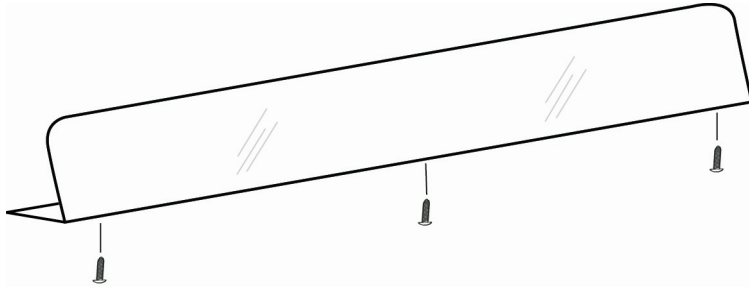

Parts List—Upper

- (1) Right hand upper shield
- (1) Left hand upper shield
- (6) #8 Sheet metal screws

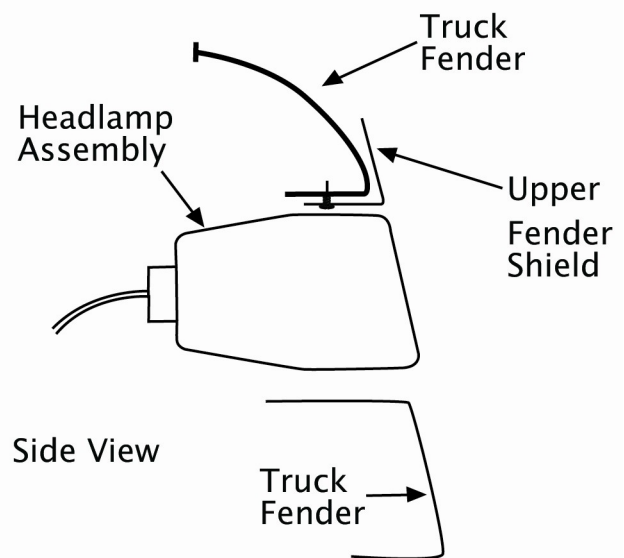

Instructions

1. Unpack the carton and carefully determine that you have all the parts as shown in the parts list and the illustration
2. Remove the complete headlamp assembly.
3. Hold the upper fender shield in position and carefully mark the 1/8" hole location for the sheet metal screws.
4. Drill all of these holes and mount the fender shields.
5. Remount the headlamp assembly in place.



13813 S. Main Street, Los Angeles CA 90061 " (310) 767.5900 " fax (310) 767.5901

www.thinkroadmaster.com